

cloud rose adj



installation instructions

revision 1 page 1 of 1

This product should be installed by a qualified electrician in accordance with all current, local legislation. For the UK, the current edition of the IEE Wiring Regulations and European Standard IEC 60364.

diagrams

NL | NH | NU | OR | OH | OT | WD

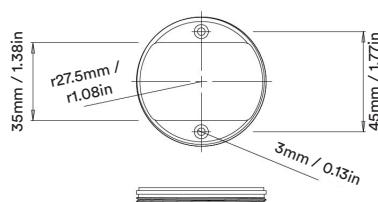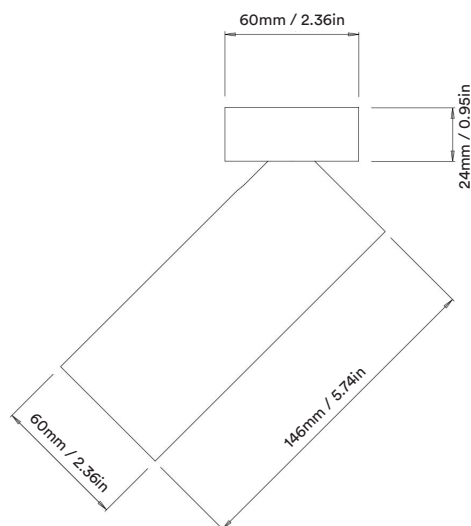

luminaire details

cut-out	see diagram	class	III
clearance (driver)	100mm	ip rating	IP54
fixing method	mounting plate	ip zone	Zone 1
min ceiling thickness	n/a	cable type	2 Core 0.75mm ²
max ceiling thickness	n/a	cable length	180mm
max driver distance	20m	bezel temp	F Rated

engine code	engine description	wattage	current	energy class
NL	origin natural	11.9W	350mA	F
NH	origin natural high output	14W	400mA	F
NU	origin natural ultra output	21W	600mA	F
OR	origin	11.9W	350mA	F
OH	origin high output	14W	400mA	F
OU	origin ultra output	21W	600mA	F
OT	origin tuneable	10.8W/6.4W	300mA/185mA	F
WD	origin warm dim	11.9W	350mA	F

For spot and speciality beam angles the current and wattage can differ from the standard, please refer to product datasheet for more information. This product contains a light source of energy efficiency class (see table above) to Regulation (EU) No 2019/2015 (01/09/2021).

installation

1. Prepare installation location by cutting a 35mm x 42mm hole in the mounting surface.
2. Wire luminaire cable to Orluna certified driver, ensuring correct polarity.

Static Colour - channel 1: red to positive terminal [+] and black to negative terminal [-]

Tuneable White - channel 1: brown to positive terminal [+] and white to negative terminal [-]
channel 2: red to positive terminal [+] and black to negative terminal [-]
3. With mains supply switched off, connect fitting to the mains supply (to avoid damaging the luminaire, do not hot-wire).
4. Screw the main body of the luminaire onto mounting plate.
5. After installation, turn on the power to confirm the fitting operates correctly. If no light is emitted, switch off the power immediately and check the wiring.



Information: Do not power on the unit until the fitting is correctly wired. Constant-current LEDs must be connected in series, and correct polarity is essential. Refer to the driver specification sheet for details on the minimum and maximum number of LEDs per circuit. Ensure all cables and connections are securely fitted before switching on the power. Failure to do so may cause damage to the LEDs and/or driver. If the luminaire fails to operate when powered, immediately disconnect the power and check the wiring polarity. If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by the manufacturer.

Driver: Class III luminaires, use Orluna-approved SELV control gear in accordance with IEC/EN 61347-2-13 or an equivalent standard, with a maximum output voltage (U_{out}) of less than 60V DC.
Cleaning: Clean using a soft, damp cloth with water and a mild, pH-neutral, non-abrasive cleaner. Do not use solvents or high-pressure cleaners. Avoid contact with chemicals that may corrode metal components or affect the surface finish.

Connections: For dry environments, use 2 x Wago 221-2411 or equivalent connectors. In damp or wet environments, use connectors with equivalent electrical ratings and suitable IP protection.

ORLUNA LED Technologies Limited,
Unit A, Chiltern Park Industrial Estate,
Dunstable, LU5 4LT
United Kingdom

info@orluna.com
+44 (0) 1923 889 712

This fitting contains a replaceable (LED only) light source, that must be replaced by a professional. If the product has come to the end of its life or is in need of repair please contact Orluna.



orluna